


Wire length: 55cm  
 Crimp the corresponding ferrule/terminal on both ends of the wires.  
 Place the terminals in the correct location of the connector housing.  
 Place a ferrite core at both ends of the cable and close it.

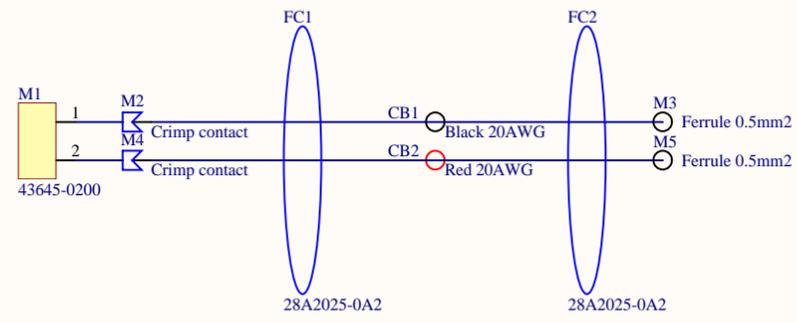

	<b>Title:</b> <b>PSU to PCBA Cable Assembly</b>	
	<b>Drawn:</b> TLa	<b>Number:</b> 1.
<b>Checked:</b> TSt	<b>Date:</b> 11-12-2017	<b>Sheet:</b> 1 of: 1
<b>File:</b> MLA-0387-C2.SchDoc		